

# TYPICAL LAWN SPRINKLER SYSTEM WITH A DUAL CONNECTION

Please note: Per City Code (Meridian City) does not allow Dual Connections on residential homes. A Dual Connection consist of a physical piping connection that exist between the City's potable water supply and another source such as pressurized irrigation water supply which is non-potable. For more information please refer to City code for all rules and regulations under CHAPTER: 9-1-28 SECTION: C-1: Pressurized Irrigation Systems.

## DUAL CONNECTION REMOVAL:

1. REMOVE CUSTOMER MAIN VALVE / DRAIN VALVE AND CAP / PLUG THE TEE OR REMOVE TEE AND STRAIGHT PIPE TO SERVICE
2. REMOVE BACKFLOW ASSEMBLY AND PIPING THAT IS CONNECTED TO IRRIGATION CONTROL VALVE BOX AND CAP / PLUG, LEAVING THE (PI) AS THE ONLY SUPPL FOR THE SPRINKLER SYSTEM
3. AFTER STEPS 1 - 2 ARE DONE PLEASE CONTACT THE CITY OF MERIDIAN WATER DIVISION TO SCHEDULE A TIME FOR A CROSS CONNECTION CONTROL INSPECTOR TO COMPLETE A FINAL VISUAL INSPECTION # 208-985-1223

